

## Instructions Changing codes



To enter code programming Press “ \* 5” then your 4 digit master code.

The system now is waiting on the user that you want to change or add

Enter the 2 Digit user ie:    User 1    enter “01”  
  User 2    enter “02” .....ETC  
  User 40 enter “40” (*user 40 is the Master code*)

Now enter the 4 digit code number you want and press “##”